



ISTRUZIONI INSTALLAZIONE SISTEMI DI DRENAGGIO

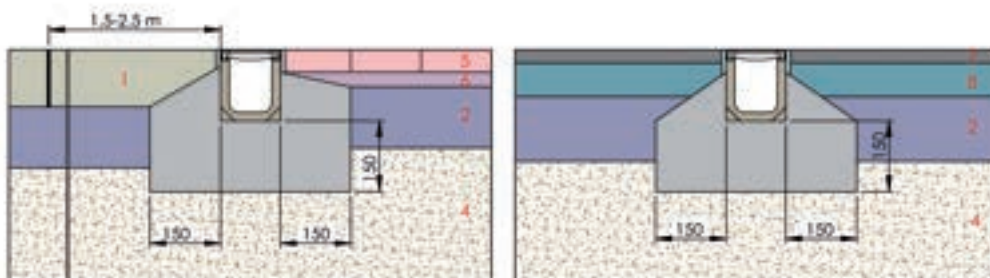

Classe B125
Class B125



Classe C250
Class C250

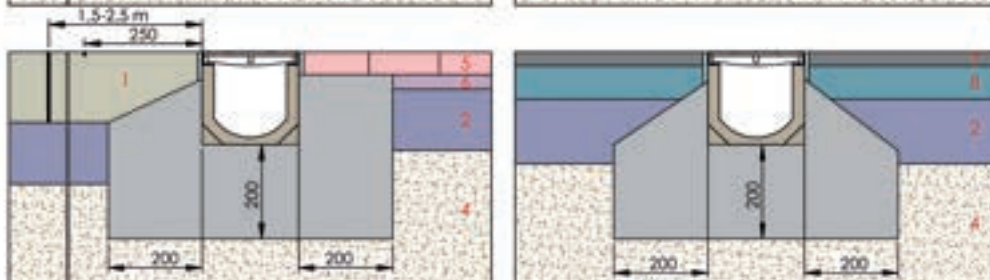

Classe D400 E600
Class D400 E600



Classe F900
Class F900



Tipi di assemblaggio e applicazioni

- 1- Calcestruzzo stradale
 - 2- Base
 - 3- Rivestimento in calcestruzzo del corpo del canale
 - 4- Strato sottostante, terreno naturale
 - 5- Lastre prefabbricate in calcestruzzo o sistemi in pietra
 - 6- Letto di pavimentazione
 - 7- Manto stradale
 - 8- Binder
 - 9- Base bituminosa
- FDS: sistema di tenuta di raccordo
B15-B25: qualità del cemento

APPLICAZIONE DEL PAVIMENTO IN CEMENTO
APPLICAZIONE DELL'ASFALTO

Assembly types and applications


- 1-Cast road concrete
 - 2-Base
 - 3-Concrete cladding of the channel body
 - 4-Sub base, natural soil
 - 5-Prefabricated concrete sheets or stone system
 - 6-Paving bed
 - 7-Wearing course
 - 8-Bonding course
 - 9-Bitumen baset
- FDS: joint sealing system
B15-B25: concrete quality

APPLICATION OF CONCRETE FLOOR
APPLICATION OF ASPHALT FLOOR



ISTRUZIONI INSTALLAZIONE SISTEMI DI DRENAGGIO

INFORMAZIONI

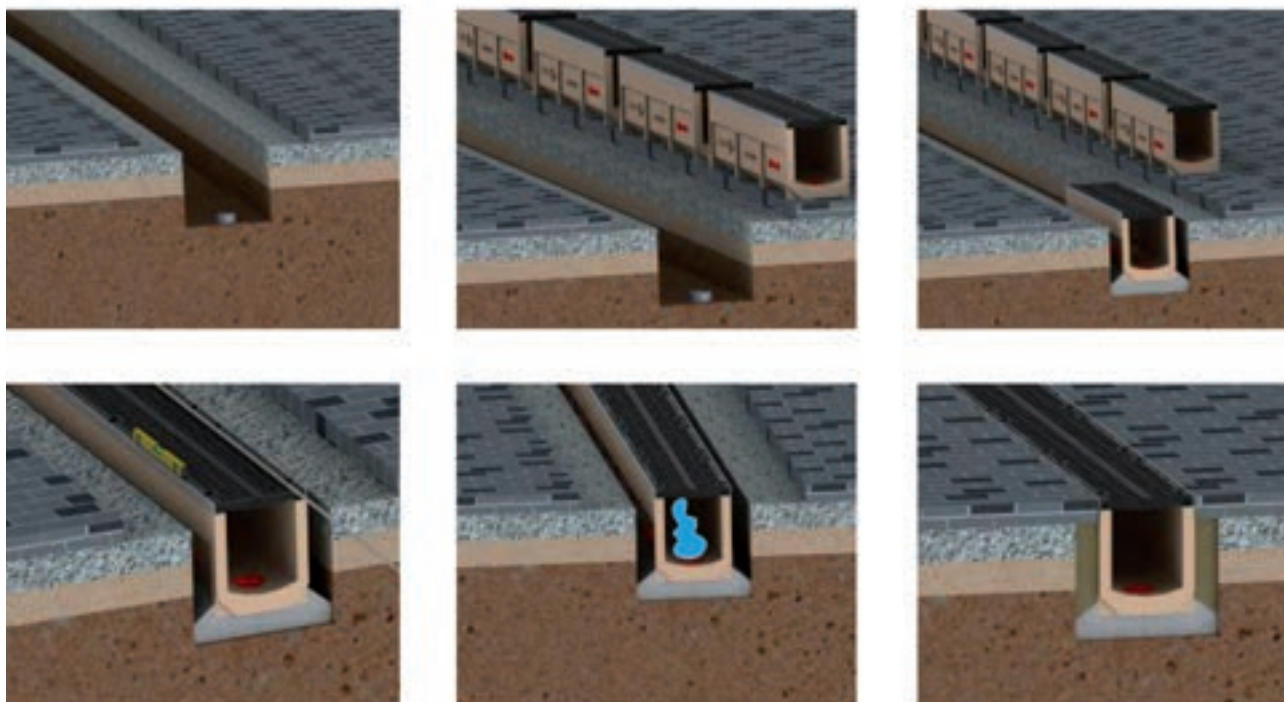

1. Il terreno deve essere scavato come una linea più grande delle dimensioni del drenaggio
2. Canali di drenaggio devono essere posti accanto al bordo con attenzione
3. I canali di drenaggio devono essere ordinati sulla linea delle frecce
4. La pendenza del terreno deve essere % 1-1,5 all'interno del pozzetto.
5. Come primo passo dell'installazione, l'unità di raccolta dovrà collegare il sistema di tubazioni dell'acqua piovana
6. Una corda deve posare lungo la linea del canale
7. Occorre realizzare un basamento in cemento. La pendenza deve essere controllata tramite un contatore dell'acqua
8. Entrambi i lati dei canali di drenaggio devono essere riempiti di cemento
9. Dopo questo processo, entrambi i lati dei canali vengono riempiti completamente di basamento fino alla superficie
10. Il materiale della superficie deve essere 3-5 mm più alto della griglia dei canali di drenaggio.
11. L'installazione deve essere eseguita con canale di drenaggio + griglia insieme, senza smontarli
12. La regolazione dei canali di drenaggio deve essere eseguita con cura tramite un martello di plastica
13. L'installazione deve essere eseguita secondo il materiale di base e la classe di carico dei canali di drenaggio.

1. The ground has to be dig like a line larger than drainage dimensions
2. Drainage channels put next to the line carefully
3. Drainage channels must sort on the arrow ways
4. Ground slope has to be % 1-1.5 in the sump unit.
5. As first step of installation the sump unit is going to connect rain water pipe system
6. A rope has to lay on the scale of the channel along the line
7. A basement concrete bedding has done. The slope has to control with a water gauge
8. Both side of the drainage channels has to fill with concrete
9. After the curing both side of the channels full fill with basement material until the surface
10. Surface material must be 3-5 mm higher than grating of the drainage channels.
11. Installation has to be done drainage + grating together without any disassembly
12. The adjustment of the drainage channels has to be done carefully with a plastic mallet
13. Installation must done regarding base material and the load class of drainage channels.

